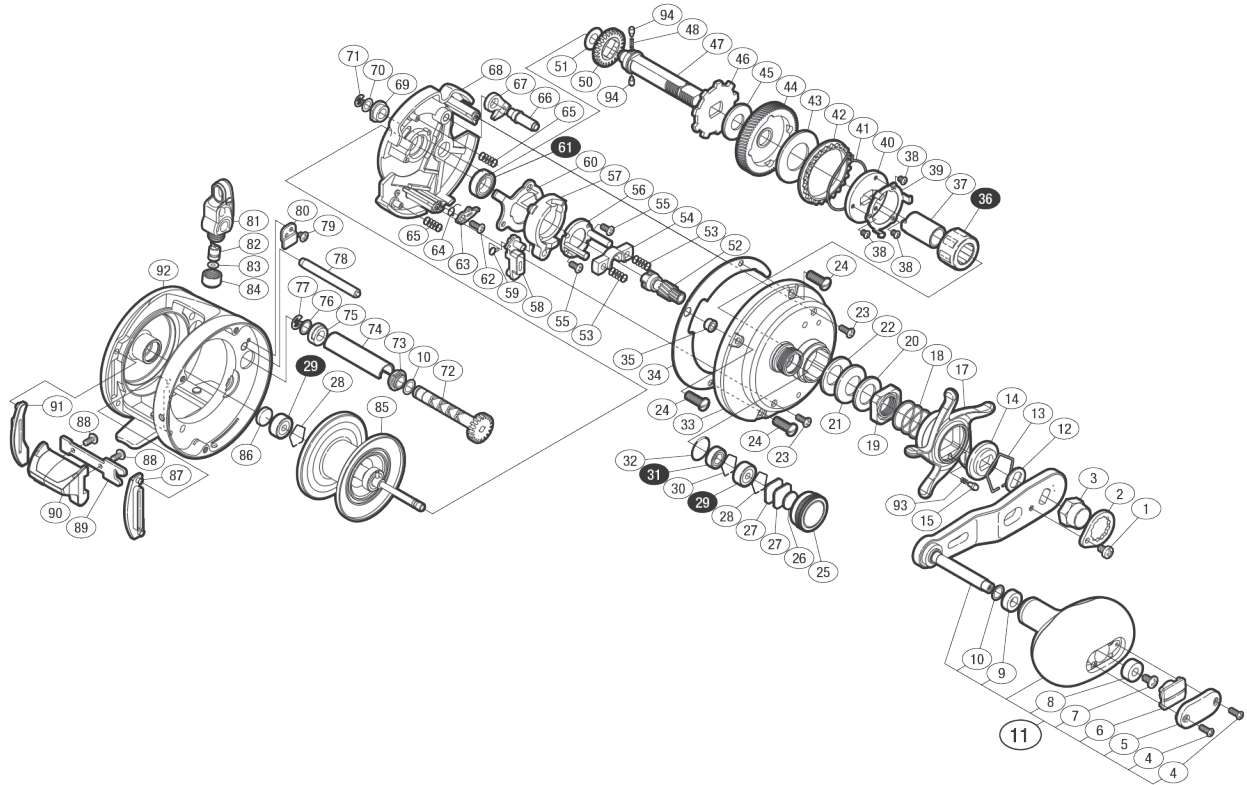


短縮コード **03058**

#	Part Name	Part No
1	HANDLE NUT PLATE SCREW	BNT0770
2	HANDLE NUT PLATE	BNT3890
3	HANDLE NUT	TGT1638
4	CLUTCH CAM SCREW	BNT1930
5	HANDLE KNOB I.D. PLATE	BNT4427
6	HANDLE KNOB SEAL	BNT4428
7	SLIDER RETAINER SCREW	BNT4116
8	HANDLE KNOB BUSH A	BNT2154
9	HANDLE KNOB BUSH B	RD14171
10	HANDLE KNOB WASHER SET	BNT03058-0010
11	HANDLE ASSY	BNT03058-0011
12	FRICITION WASHER	BNT2872
13	CLICK PLATE RETAINER	BNT2120
14	STAR DRAG CLICK	BNT2121
15	CLICK PIN	BNT2122
16		
17	STAR DRAG	BNT03058-0017
18	STAR DRAG SPRING	BNT2125
19	STAR DRAG NUT	TGT1737
20	STAR DRAG WASHER	BNT1730
21	DRAG SPRING WASHER (L)	BNT1613
22	DRAG SPRING WASHER (H)	BNT1455
23	SCREW	BNT4521
24	SCREW	BNT4528
25	CAST CONTROL CAP	BNT03058-0025
26	SPACER	BNT1696
27	SPACER (A)	BNT0009
28	LEFT (SPOOL) BEARING LOCK	BNT0032
29	BALL BEARING	BNT3812
30	BUSH RETAINER	BNT4380
31	BALL BEARING	BNT4194
32	O RING	BNT0188
33	SIDE PLATE	BNT03058-0033
34	SIDE PLATE SUPPORT	BNT4569

#	Part Name	Part No
35	SCREW COLLAR	BNT4568
36	ROLLER CLUTCH	BNT4225
37	ROLLER CLUTCH INNER	BNT03056-0037
38	SCREW	BNT03056-0038
39	RETAINER	BNT03056-0039
40	PRESSURE PLATE	BNT03056-0040
41	SPRING	BNT03056-0041
42	DRAG CLICK RATCHET	BNT03056-0042
43	DRAG WASHER C	BNT03056-0043
44	DRIVE GEAR	BNT03058-0044
45	DRAG WASHER (A)	BNT2361
46	ANTI REVERSE RATCHET	BNT4533
47	DRIVE SHAFT	BNT03056-0047
48	IDLE GEAR SPRING	BNT5027
49		
50	IDLE GEAR A	BNT4632
51	IDLE GEAR (A) SPACER	BNT1218
52	PINION GEAR	BNT03058-0052
53	YOKE SPRING	BNT4566
54	YOKE SPRING	BNT4390
55	CLUTCH CAM SCREW	BNT1302
56	CLUTCH CAM RETAINER	BNT4538
57	CLUTCH CAM	BNT4392
58	CLUTCH PAWL A	BNT4539
59	CLUTCH PAWL SPRING	BNT4540
60	CLUTCHPLATE	BNT4541
61	BALL BEARING	BNT3927
62	SCREW	BNT0817
63	DRAG CLICK RATCHET	BNT03056-0063
64	CLICK SPRING	BNT03056-0064
65	YOKE SPRING	BNT1419
66	AR PAWL PIN	BNT4594
67	AR PAWL	BNT4595
68	SET PLATE	BNT4544

#	Part Name	Part No
69	D/S BUSH	BNT4396
70	WASHER	BNT4397
71	LEVER SHAFT RETAINER	BNT0234
72	WORM SHAFT	BNT03056-0072
73	WORM BUSHING (A)	BNT1699
74	LEVEL WIND GUARD	BNT1241
75	WORM BUSHING (B)	BNT1243
76	WORM SHAFT SPACER	BNT1838
77	WORM SHAFT RETAINER	BNT0133
78	L/W GUIDE	BNT4546
79	SCREW	BNT4400
80	WORM BUSHING RETAINER	BNT4401
81	LINE GUIDE	BNT03056-0081
82	LINE GUIDE PAWL	BNT2150
83	SPACER	BNT0060
84	PAWL CAP	BNT2457
85	SPOOL ASSY	BNT03058-0085
86	SPACER (B)	BNT0664
87	CLUTCH BAR GUIDE B	BNT4549
88	DIAL CASE SCREW	BNT0623
89	CLUTCH PLATE B	BNT4550
90	CLUTCH BUTTON	BNT4551
91	CLUTCH BAR GUIDE A	BNT4552
92	FRAME	BNT03058-0092
93	CLICK SPRING	BNT4931
94	VGEAR PIN	BNT5310