



# 6000

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0244	Ball Bearing	2534	Bail Spring Guide (B)	4004	Drive Gear Bushing
0345	Anti-Reverse Lever Screw	2541	Anti-Reverse Pawl Screw	4005	Drive Gear
0521	Rotor Nut	2544	Anti-Reverse Lever	4007	Oscillating Gear
0690	Drive Gear Washer	2548	Side Cover Screw (small)	4024	Spool Assembly (S-6)
0693	Drag Washer "C2" (cloth)	2571	Bail Arm Screw	4025	Main Shaft
0697	Eared Washer "B"	2722	Counterbalance Cover Screw	4026	Pinion Gear
0701	Hold Click Spring	3125	Drag Click Screw	4027	Oscillating Slider
0787	Nut Lock Screw	3195	Bushing	4028	Oscillating Slider Retainer
0921	Drag Shaft	3307	Line Roller Bushing	4029	Key Washer "A"
0922	Drag Coil Spring	3359	Line Roller Washer	4030	Drag Knob
0940	Bail Hold Support Screw	3387	Handle Screw Lock	4049	Drag Spring Washer
1008	Handle Lock Washer	3747	Slider Retainer Screw	4050	Drag Click
1310	Line Roller Screw	3991	Rotor	4119	Oscillating Gear Bushing
1319	Drag Knob Screw	3993	Bail Spring Cover	4498	Line Roller Collar (A)
1511	Lever Spring	3994	Bail Trip Lever	4499	Line Roller Collar (B)
1520	Anti-Reverse Cam Spring	3995	Counterbalance Cover	4580	Bail Assembly
1672	Pressure Screw	3996	Anti-Reverse Lock Out	4581	Bail Arm
1863	Handle Screw Cap	3997	Anti-Reverse Lock Out Spring	4585	Handle Assembly
2262	Drag Washer "C1" (blue)	3998	Lock Out Spring Holder	4625	Side Cover Flange
2342	Side Cover Screw (large)	3999	Bearing Retainer Screw	5163	Side Cover
2530	Bail Spring Cover Screw	4000	Anti-Reverse Pawl	5164	Body
2532	Bail Spring Guide (A)	4001	Anti-Reverse Pawl Spring	5370	Line Roller
2533	Bail Spring	4002	Anti-Reverse Cam		